

## **EN** Troubleshooting Guide InDiago 510

### Products

InDIAGO

---

The product is designed and tested to achieve optimum operation reliability and long life, provided that the operation, maintenance and inspections are carried out in accordance with the prescribed instructions. If in spite of this a fault appears you can get guidance about what to do according to the fault finding list below.

Remove the load from the internal cabinet before fault finding and repair work is carried out.

Fault finding, service and repair work shall be made by competent persons only.

| Symptom   | Action  |
|---|---|
| <b>The internal cabinet lift does not move when a control signal is given</b> | <p>Check that the fuse for the mains feed is not damaged.</p> <p>Check that the mains plug is connected.</p> <p>Check that the safety trip panel is not actuated.</p> <p>Check that the wires are properly fastened in the control box and in the control button.</p> |