


**AKW**<sup>®</sup>  
Life Made Better

# Denova<sup>®</sup> Mono Wash Basin Mixer Tap


INSTALLATION INSTRUCTIONS

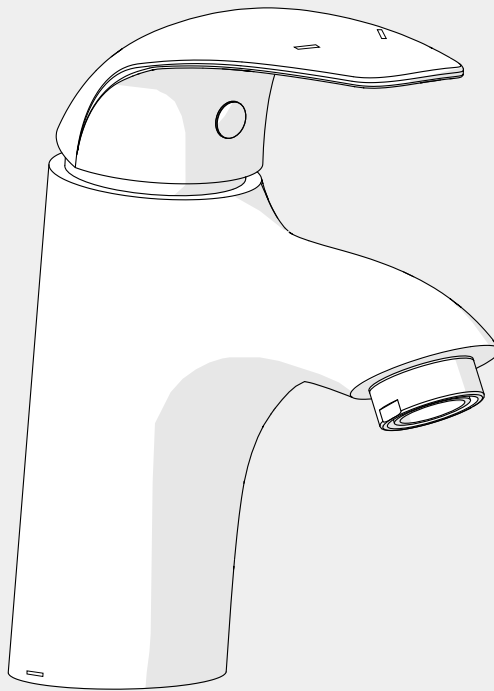


Please read all instructions before installation and leave this document with the end user for future reference as it contains important warranty information

# Important Information

## Dimensions and Parts

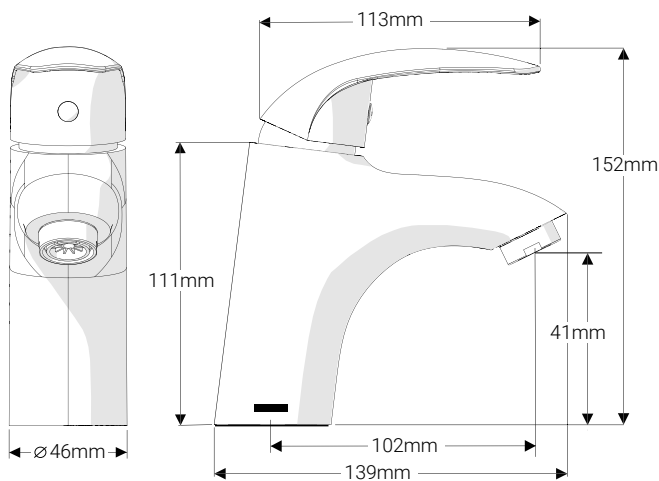

| Ref | Description             | Qty |
|-----|-------------------------|-----|
| A   | Basin mixer tap         | 1   |
| B   | Rubber O-ring           | 1   |
| C   | Rubber horseshoe washer | 1   |
| D   | Metal horseshoe washer  | 1   |
| E   | Stud                    | 1   |
| F   | Fixing nut              | 1   |
| G   | 500mm Flexible hose     | 2   |

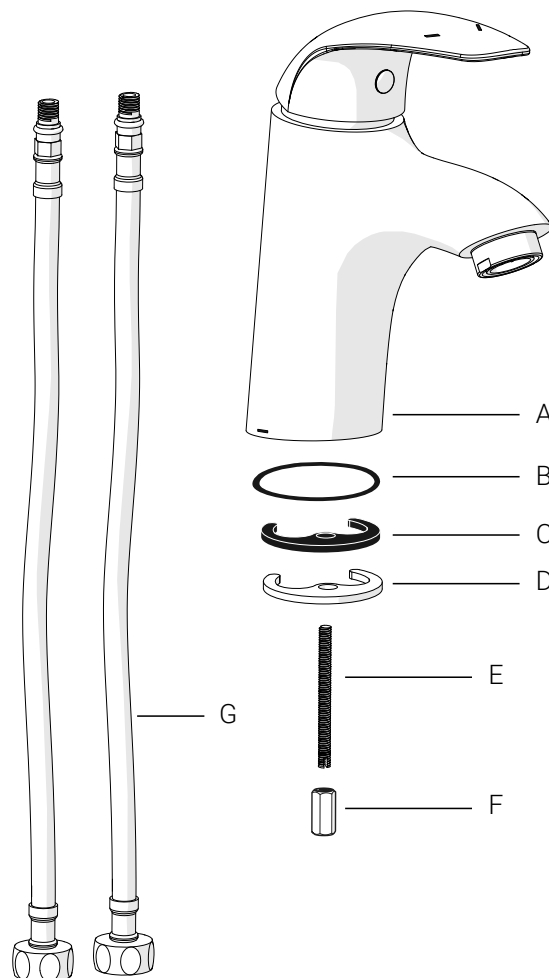

## Flow rate for tap

| Tap Flow Performance                 |            |            |            |             |            |             |
|--------------------------------------|------------|------------|------------|-------------|------------|-------------|
| Tap Flow Rate (without Flow Limiter) |            |            |            |             |            |             |
| Dynamic pressure                     | 1 bar      |            | 3 bar      |             | 5 bar      |             |
|                                      | Position 1 | Position 2 | Position 1 | Position 2  | Position 1 | Position 2  |
| <b>Full cold/hot water</b>           | 7.1 L/min  | 11.7 L/min | 9.6 L/min  | 20.7 L/min  | 11.4 L/min | 27.3 L/min  |
| <b>Mixed water</b>                   | 6.56 L/min | 13.5 L/min | 9.75 L/min | 24.02 L/min | 9.14 L/min | 31.17 L/min |



These taps are suitable for low and high pressure systems.


Pressure regulators should be used to achieve nominally equal supply.

If you are unsure, please obtain the advice of a professional plumber before attempting any work. Minimum working pressure 0.2 bar.

Note: the hot and cold inlet tails are indicated at the base of the tap.

⚠ Isolate water supply before commencing work.

- 1 Fit flow limiters (not supplied) if required.
- 2 Feed the flexible hoses (G) through the hole in the mounting surface.
- 3 Place the tap (A) onto the mounting surface with the seating O-ring (B) under the base of the tap.
- 4 Feed the washers and nut onto the stud in the order shown below, then tighten the nut.
- 5 Connect the flexible hoses to the water supply. The markings on the side of the tap at the base indicate which hose is which. Using isolator valves (not supplied) is recommended.

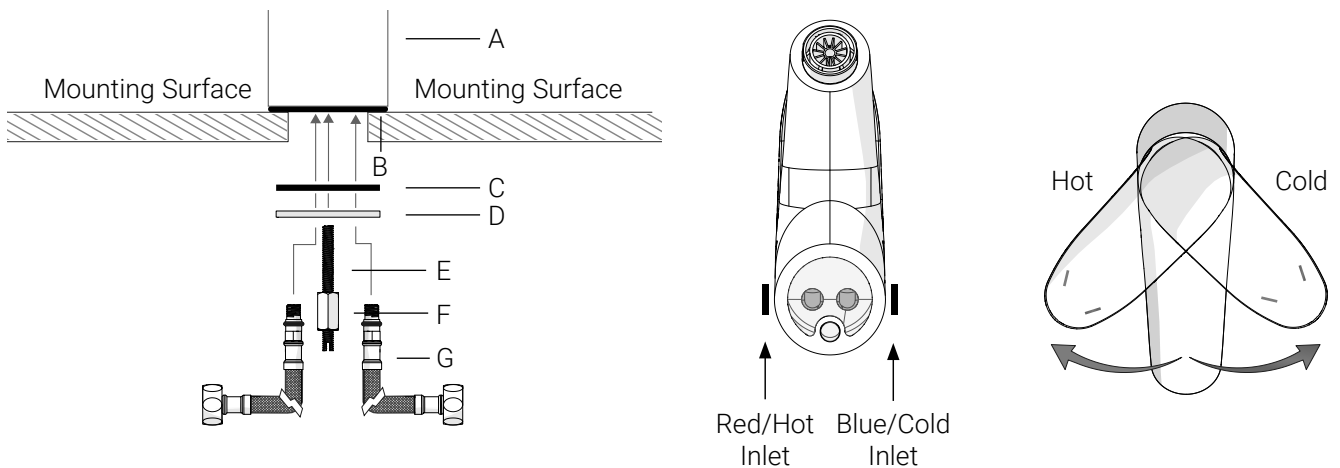

### Commissioning

Open any isolating valves and check for leaks.  
 Turn tap head to cold and lift to turn on.  
 Allow a few minutes of cold running and then repeat for the hot water.  
 Turn off tap and check for further leaks.

### Cleaning and Care

Clean using warm, soapy water only.  
 Do not use scourers or abrasive cleaners which may affect the surface finish.  
 Never use corrosive acidic or alkaline cleaning materials on fittings or surfaces.  
 Always flush cleaning materials away with copious amounts of water and wipe down to dry.

# Contact Us

**AKW**<sup>®</sup>  
Life Made Better

## Orders & Quotes

01905 823 299  
orders@akw-ltd.co.uk

## General Enquiries

01905 823 298  
sales@akw-ltd.co.uk

## Technical Enquiries

01905 560 219  
tech@akw-ltd.co.uk

## Kitchen Enquiries

01905 823 262  
kitchens@akw-ltd.co.uk

## Fax

01905 823 297

## AKW

Pointon Way, Hampton Lovett  
Droitwich Spa, WR9 0LR

[www.akw-ltd.co.uk](http://www.akw-ltd.co.uk)  
[orders.akw-ltd.co.uk](http://orders.akw-ltd.co.uk)

## Follow us on Social:



## Warranty

Warranty applies only to manufacturing or material defects, conditional on the one-time correct installation of the product. It does not apply to:


- Inappropriate use or accidental damage.
- Damage or defects that result from incorrect installation.
- Lack of maintenance including the build up of grime or damage resulting from inappropriate cleaning.
- Damage or defects that result from repairs or modifications undertaken by unauthorised persons.
- General wear and tear through usage and does not apply to surface finishes.

Warranty period starts from the date of installation. See the T&Cs on our website for further information.

### Select 1 of 2 ways to activate your warranty



#### 1. Scan using your Smart Device

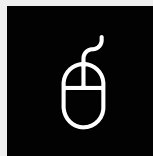

#### 2. Visit Online

[akw-ltd.co.uk/warranty-information](http://akw-ltd.co.uk/warranty-information)

### What to do if something goes wrong?

In the event that you encounter a problem with this product, follow the trouble shooting guide if applicable, then contact your local installer. If the issue is still unresolved, contact AKW Technical Enquiries who will provide further advice and arrange for a maintenance engineer to visit if necessary. None of the foregoing affects your statutory rights.