


Denova Bath Shower Mixer


INSTALLATION & USER MANUAL

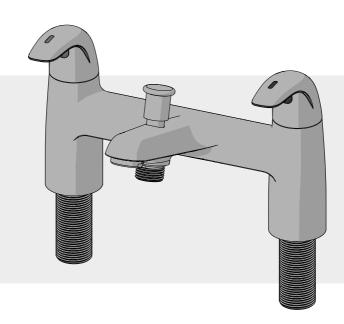



Important Information

Dimensions 222mm 195mm 50mm 180mm A A B C

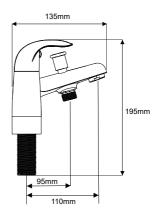

	Parts	QTY
Α	Bath Mixer	1
В	Base O ring	2
С	Washer	2
D	Back nut	2

Installation must be carried out in accordance with these instructions, and must be conducted by qualified and competent installer.

S D

This product must be installed in compliance with Water Regulations. You may need to fit the optional Flow limiter to meet local requirements. Hot and cold water supply pressures should be balanced, isolating and non-return valves should be fitted. If you are unsure, please obtain the advice of a professional plumber before attempting any work.

Water Pressure

These taps are suitable for low and high pressure systems.


These taps should not be used with pressures exceeding 5 Bar. Min Pressure 0.2bar.

Where the supplies are unbalanced, i.e. Hot water from cylinder tank / cold from the mains, approved check valves must be fitted in the supply pipes. If the mains pressure is over 5bar, then a pressure reducing valve should be fitted. If the taps or mixers are installed to low pressure (tank fed), then the minimum height from the outlet of the nozzle to the underside of the cold tank should be 1.8 metres to ensure adequate performance.


Important: Access must be made available to the water supplies and fixings for future maintenance and servicing.

Installation Instructions


Warning! Before installation, it is essential that you thoroughly flush through the supply pipes to remove any remaining swarf, solder or other impurities. Failure to do so could cause damage to the internal workings of the tap. AKW will not accept responsibility for any problems that occur through incorrect installation. ISOLATE WATER SUPPLY.

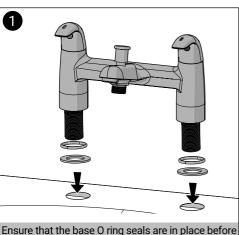


installing the mixer onto the bath.

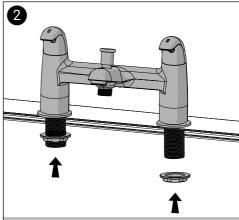

Install the mixer onto the bath, using the washers and back nuts provided. Do not over-tighten as this may damage the mounting surface.

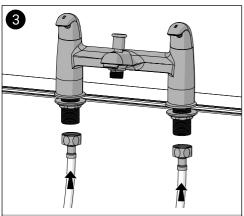

Connect the hot and cold water supplies. Turn on the water supplies. Open both levers letting the water flow for a few minutes to flush the system.

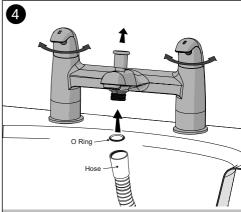

Connect the Shower hose to the bath mixer. Ensure the O ring is in position. Flow regulators can be used to reduce the flow.

To change from bath to shower mode, pull the diverter lever up. To revert back to bath fill mode, push the diverter lever back down. To change the temperature and flow, turn the handle levers, do not lift.

The shower mixer should be cleaned as part of a planned maintenance programme. Do not use abrasive cleaning chemicals or scouring cloths as this will effect the surface finish.

Contact



Orders & Quotes

01905 823 299 orders@akw-ltd.co.uk

General Enquiries

01905 823 298 sales@akw-ltd.co.uk

Technical Enquiries

01905 560 219 technicalenquiries@akw-ltd.co.uk

Kitchen Enquiries

01905 823 262 kitchens@akw-ltd.co.uk

Fax

01905 823 297

AKW

Pointon Way, Hampton Lovett Droitwich Spa, WR9 0LR

www.akw-ltd.co.uk orders.akw-ltd.co.uk

Follow us on Social:









Guarantee

The life time guarantee only applies to manufacturing or material defects, conditional on the one-time correct installation of the product and does not apply to blockages, inappropriate use or accidental damage. This does not cover damage or defects that result from incorrect installation, lack of maintenance including the build up of grime, dirt or limescale and waterborne debris, damage resulting from inappropriate cleaning or water ingress, damage from water freezing or extreme temperature changes. Damage or defects that result from repairs or modifications undertaken by unauthorised persons who are not maintenance engineers. This quarantee excludes general wear and tear through usage and does not apply to surface finishes.

What to do if something goes wrong?

In the event that you should encounter a problem with this product, please contact your local installer and if this does not resolve the issue, then contact AKW technical team who will provide further advice and, if necessary, arrange for a maintenance engineer to visit and report any issues. See the T&Cs on our website or in our catalogue for further information. None of the foregoing affects your statutory rights.