


EN Operating / Care instructions Basicline 406

1. Operating instructions

Basicline 406 is a bracket with gas spring for height adjustment of the washbasin. The built-in gas spring helps to adjust the height of the washbasin to the desired position. No tools required for adjustment. Basicline 406 is mounted below the mirror and mirror cabinet.

Height adjustment:

1. Pull out the locking pin and turn it 1/4. (Pos. 1)
2. Adjust the height.
3. Turn the locking pin 1/4 and release it to lock the height.

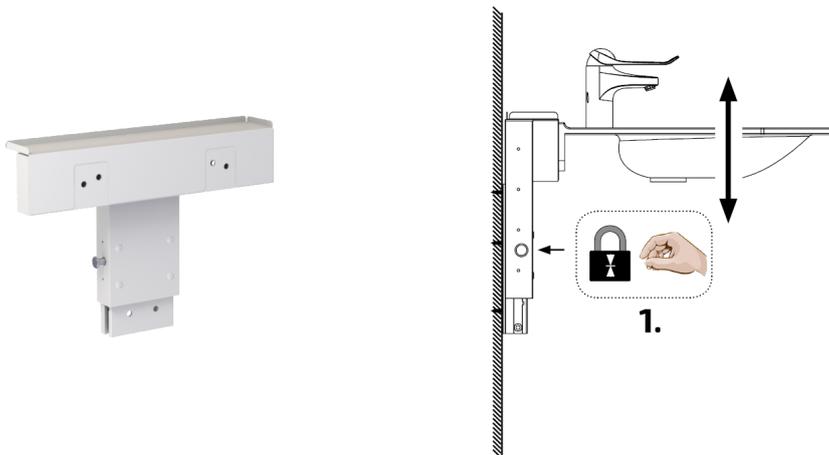

2. Maintenance

The product is maintenance-free. Greasing and other actions are made during the manufacturing for the lifetime of the lift. From safety point of view however some components shall be inspected each year.

- Inspections, service and repair work shall be made by competent persons.
- Remove any objects from the washbasin before maintenance and repair works are made.

3. Functional test

- Check that the locking pin is properly fixed to the bracket.
- Check that no cables or hoses are jammed and that the water and sewer hoses are properly fixed to the wall.
- Make sure the wall installation and washbasin installation are intact.

4. Cleaning

Clean with lukewarm water and a non-scratching detergent containing soap or similar. Use a soft cloth or similar. After cleaning the surfaces shall be dried to avoid lime deposits.

Scratching detergents or tools e.g. steel wool may not be used.

5. Service & maintenance records

Order	Serial	Date
Date	Date	
Sign	Sign	
Remarks	Remarks	
Date	Date	
Sign	Sign	
Remarks	Remarks	