

## EN Operating / Care instructions Changing table 333

### 1. Operating instructions

Height adjustable baby changing table.

- Press and hold the button to start the operation. The height above floor is shown in the display.
- Release the button when the changing table is at the desired level.

#### Pos. 1


Control button

#### Save height position in the memory:

Run to the desired height, press once on the S and then again at the memory location you wish. (1-4)

Push button 1-4 to adjust the height to the memory position.

(For reasons of safety the button must be held down throughout the journey.)

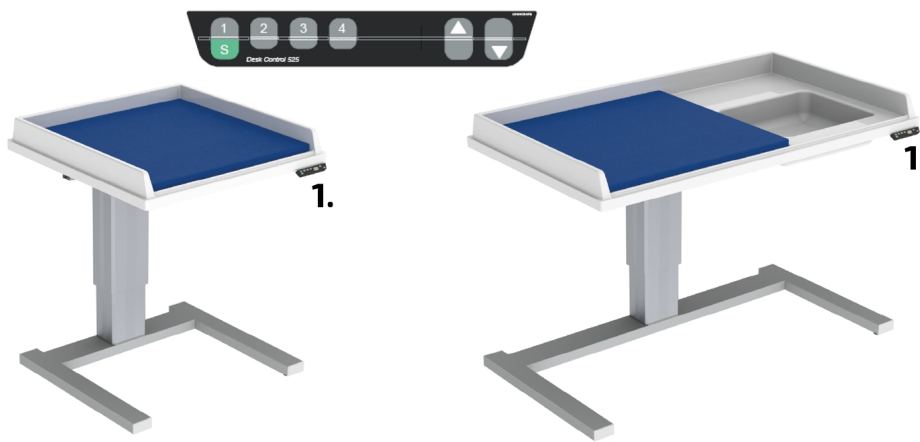

### 2. Maintenance

The changing table is maintenance-free. Greasing and other actions are made during the manufacturing for the lifetime of the lift. From safety point of view however some components shall be inspected each year.

- Inspections, service and repair work shall be made by competent persons.
- Remove any objects from the changing table before maintenance and repair works are made.

### 3. Functional test

- Minimum distance to any adjacent fitting must be at least 50 mm.  
If the distance from the changing surface to a wall or an adjacent fitting is less than 50 mm, a pinching hazard exists.
- Check that the changing table is firmly in place. If necessary, adjust the adjustable feet under the frame.
- Run the changing table down and up all the way to respectively end position. Check that it moves freely, without hindrance and jarring sounds.
- Check that no cables are jammed.
- If the changing table does not reach the lowest position:  
Press the down button for 5 seconds until the control box clicks. When the control box clicks the synchronisation is ok.
- Model with sink:  
Run the changing table to the end position and make sure the hoses are long enough above the fixing point.

## 4. Cleaning

Clean with lukewarm water and a non-scratching detergent containing soap or similar. Use a soft cloth or similar. After cleaning the surfaces shall be dried to avoid lime deposits.

**Scratching detergents or tools e.g. steel wool may not be used.  
Consider that the product contains electrical components.**

### **Cleaning the plastic surface - ABS plastic:**

The surface is easy to keep clean. Use cleaning spirit to ensure hygiene. Do not use abrasive or corrosive cleaning agents, this might damage the finish.

## 5. Service & maintenance records

<b>Order</b>	<b>Serial</b>	<b>Date</b>
--------------	---------------	-------------

<b>Date</b>	<b>Date</b>
<b>Sign</b>	<b>Sign</b>
<b>Remarks</b>	<b>Remarks</b>

<b>Date</b>	<b>Date</b>
<b>Sign</b>	<b>Sign</b>
<b>Remarks</b>	<b>Remarks</b>