


Geberit AquaClean 8000*plus* Care remote control

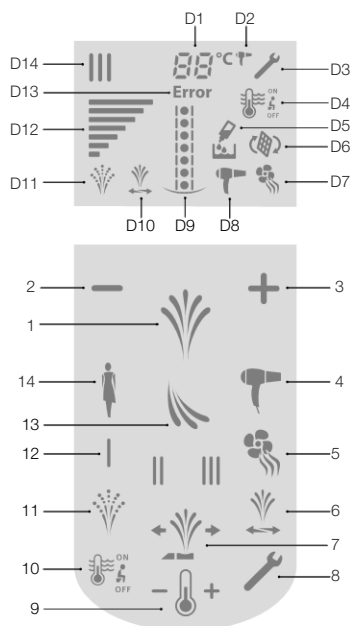

Display

- D1 Shower water / dryer air temperature display
- D2 Dryer temperature
- D3 Service icon
- D4 Water heater function status display
- D5 Nozzle cleaner refill icon
- D6 Filter replacement symbol
- D7 Odour extraction unit
- D8 Drying
- D9 Spray arm position
- D10 Oscillating spray
- D11 Massage spray
- D12 Spray intensity
- D13 Error icon
- D14 Activated user profile I/II/III

Buttons

- 1 <Shower>, start and stop
- 2 <Spray intensity ->, reduce
- 3 <Spray intensity +>, increase
- 4 <Drying>
- 5 <Odour extraction unit>
- 6 <Oscillating spray>, start and stop
- 7 <Spray arm position> forwards and backwards
- 8 <Service>
- 9 <Shower water / dryer air temperature>
- 10 <Water heater function> ON/ economy mode/OFF
- 11 <Massage spray>, start and stop
- 12 <User profiles I/II/III> on and off
- 13 <Toilet flush>
- 14 <Lady shower>

Additional functions of the Geberit AquaClean 8000*plus* Care remote control

You can use the remote control to call up all of the additional functions or to make and save personal settings. To activate the remote control, touch any button once. The display appears. The display switches off automatically 10 min after use.



<Lady shower>

The low spray intensity has a pleasant and gentle feel whilst cleaning. Press the button: The spray arm moves into position and the shower procedure starts. The shower stops after 20 s. You can stop the shower before this by pressing the <shower> button.



<Toilet flush>

Press the button: Triggers a full flush. Alternatively, you can also trigger a toilet flush by pressing the actuator button on the cistern.



<User profile>

Press the button: The user profile is activated with its saved settings.



<Massage spray>

The pulsating massage spray is pleasant and relaxing. Press the button: The massage spray is activated. The function can be activated before or during the shower procedure. Press the button again: The massage spray is deactivated.



<Spray arm position>

To suit your sitting position, the spray arm can be moved forwards or backwards through 7 positions in accordance with the directions shown on the arrow button.

Press the button: Set the position of the spray arm.



<Oscillating spray>

The oscillating spray intensifies cleaning efficiency. Press the button: The oscillating spray is activated. The function can be activated before or during the shower procedure. The spray arm moves back and forth. Press the button again: The oscillating spray stops.



<Water heater function>

Press the button:

- **ON** : Heating element is switched on. The water temperature is preset to 37 °C.
- **h** : Economy mode (factory setting). In economy mode, the heating element only switches on if user detection is activated. The warm-up time is 3 to 4 min.
- **OFF** : Heating element is switched off.



<Shower water temperature>

Sets the required shower water temperature. Press the button: Increase or reduce temperature.

<Dryer air temperature>

Sets the required dryer air temperature. Prerequisite: Select the drying function. Press the button: Increase or reduce temperature.



<Service>

To deactivate the spray functionality for manual cleaning or for changing the spray nozzle or dryer nozzle.

Press the button: The spray arm / dryer arm extends but is not in operation.

See chapter "Troubleshooting" for more information.