


# TP3001CP & TP5002CP Lever Pillar Taps Complies with HTM64 type TP3 & TP5

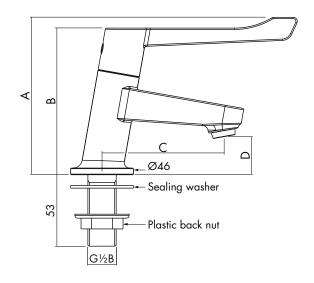

Product Code	Α	В	С	D
TP5002CP	11 <i>7</i>	109	91	28
TP3001CP high neck	184	176	103	95

## **Operating Conditions**

Max. Operating Pressure	10 bar
Min. Operating Pressure	0.1 bar
Max. Inlet Temperature	65°C
Max. Basin Thickness	26mm

## **Water Byelaws**

E. & O. E

Your Inta taps must be connected in accordance with the Water Byelaws.

To prevent back flow and contamination of the water supply for drinking and culinary purposes taps must provide an AUK2 or AUK3 air gap between the outlet and basin.

Inta basin taps provide a type AUK2 air gap, for domestic usage, and a type AUK3 for non domestic locations.

In order to prevent scalding, the hot water tap should be connected to the hot water supply via an Intamix thermostatic mixing valve.

It is recommended that a service valve is installed in the cold water supply pipe and the thermostatic mixing valve should have connections containing an isolating valve, in order to isolate the tap should servicing be required in the future.

#### Installation

The easiest way to install the taps to the basin is to do so before the basin is installed when the backnuts are easily accessible.

The tap for the hot water should be fitted on the left side when facing the basin and the cold on the right.

The tops of the taps are laser etched with there intended duty.

If replacing existing taps ensure the water supply is turned off and that the old taps are completely removed.

### **Fitting to Basin**

Insert the threaded inlet through the hole in the basin.

Fit the rubber sealing washer and plastic backnut onto the threaded inlet and tighten to secure the tap.

The plastic backnut must not be tightened with a torque in excess of 25 Nm. Do not over tighten.

Use a swivel connector with a fibre washer (tap connector) to connect the water supply and make a water tight joint.

**Note** if replacing existing taps the threaded inlet may be shorter than the original taps.

Repeat the operation for the second tap.

Turn on the water supply to both taps and run water for a couple of minutes. Check all joints for leakage.

#### **Aftercare**

Inta taps have a high quality finish and should be treated with care.

An occasional wipe with a mild washing-up liquid on a soft damp cloth followed by a thorough rinsing is all that is required.

Do not use an abrasive or chemical household cleaner as this may cause damage.

Intatec Limited, Airfield Industrial Estate, Hixon, Stafford, ST18 OPF
Tel: 01889 272180 Fax: 01889 2172181 email: sales@intatec.co.uk

© Intatec Ltd 2015 29-07-15