
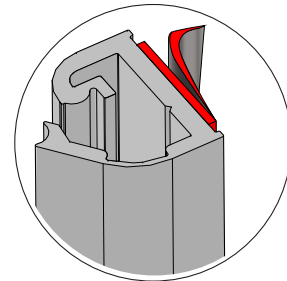
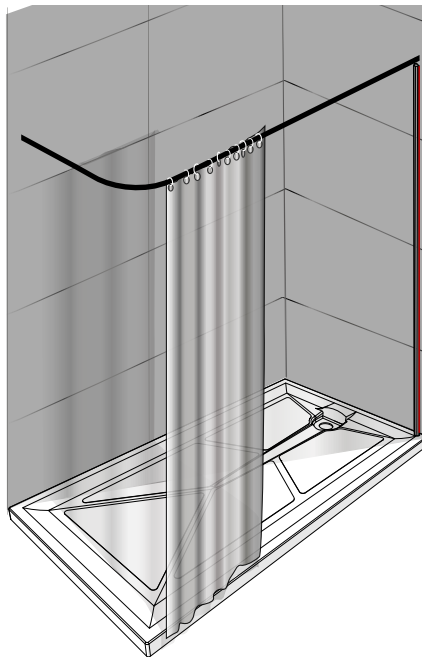

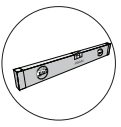
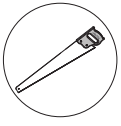
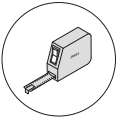


Shower Curtain Wall Clip


Installation Instructions

Step 1

Cut the Curtain Wall Clip to the required length and smooth off any cut edges. Position the Clip as required on a surface, ensuring that it is vertical, and mark its location. If the wall is suitable, the Clip can be fastened to the wall using only the double sided tape – peel off the backing from the double sided tape then locate and secure the Clip to the wall. If the wall is unsuitable for double sided tape, the Clip can be fastened with screws. Use the 'V' groove in the Clip as a guide for screw location. A suitable wall / tile drill bit is necessary. Drill pilot holes through the Clip and use these to mark the hole locations in the wall. The use of masking tape on ceramic tiles will reduce the risk of the drill bit slipping off centre when starting the hole. Drill all holes as required. Secure the Clip to the wall using suitable wall plugs and screws (not supplied).

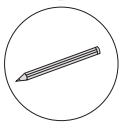

OR

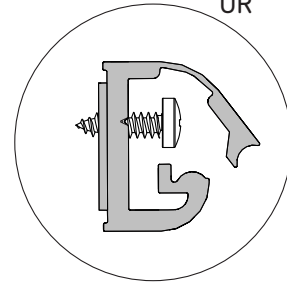

Step 2

Place the shower curtain seam edge into the Curtain Wall Clip and click it shut, clamping the curtain seam into position. Ensure that the whole curtain seam is located inside the Clip.

