

EN Operating / Care instructions Unilift 870


1. Operating instructions

Unilift 870, an electrically operated lifting and lowering system for e.g. food processing machines.

- Press and hold the button to start the operation.
- Release the button when the machine is at the desired level.

Pos. 1

Cable hand control

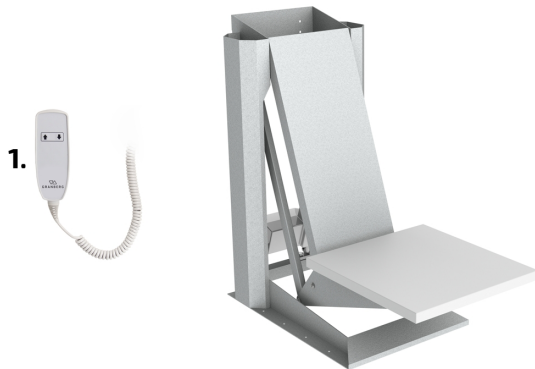

2. Maintenance

The Kitchen appliance lift is maintenance-free. Greasing and other actions are made during the manufacturing for the lifetime of the lift. From safety point of view however some components shall be inspected each year.

- Inspections, service and repair work shall be made by competent persons.
- Remove the objects from the Kitchen appliance lift before maintenance and repair works are made.

3. Functional test

Run the Kitchen appliance lift up and down all the way to respectively end position.

Check that it moves freely, without hindrance and jarring sounds. Check that no cables or hoses are jammed.

4. Cleaning

Clean with lukewarm water and a non-scratching detergent containing soap or similar. Use a soft cloth or similar. After cleaning the surfaces shall be dried to avoid lime deposits.

**Scratching detergents or tools e.g. steel wool may not be used.
Consider that the product contains electrical components.**

5. Service & maintenance records

Order	Serial	Date
Date	Date	
Sign	Sign	
Remarks	Remarks	
Date	Date	
Sign	Sign	
Remarks	Remarks	