

EN Installation instructions Changing table 335



EN Products

Daycare changing tables

Changing table 335

Changing table 335 - laundry sink

1. Mechanical construction
2. Delivery modules
3. Electrical connection
4. Location of changing table
5. Installation on a wall
6. Functional test

1. Mechanical construction

1. Motor
2. Mattress
3. ABS plastic with integrated border



2. Delivery modules

The changing table is delivered assembled on a pallet.



335 - 80 cm



335 - 140 cm with sink

3. Electrical connection

The changing table must be connected to a nearby main switch.

If the table is installed in a wet room, wet room regulations must be observed. The motor power supply must always be provided with an earth fault circuit breaker.

Connect the table to a 230V 50Hz power outlet. The outlet must be out of reach of children, remembering that the changing table surface can be raised and lowered.

Cables must be routed and fixed with care to avoid the risk of pinching.

* Power requirement 230 W.

Electrical connections must be made by a qualified electrician.

4. Location of changing table

Take care to locate the changing table so as to avoid pinching hazards. The distance to any adjacent fitting must be at least 50 mm.


If the distance from the changing surface to a wall or an adjacent fitting is less than 50 mm, a pinching hazard exists.

It is the responsibility of the installer and the user to locate the changing table so that pinching hazards are avoided.

5. Installation on a wall

Check the stability of the wall. If necessary, laying joists shall be placed according to the dimensions below.

It is the installers responsibility to ensure that sufficient stability is achieved for the changing table to operate safely with max loading. Fix the motor into the wall with 8 screws intended for the wall construction.

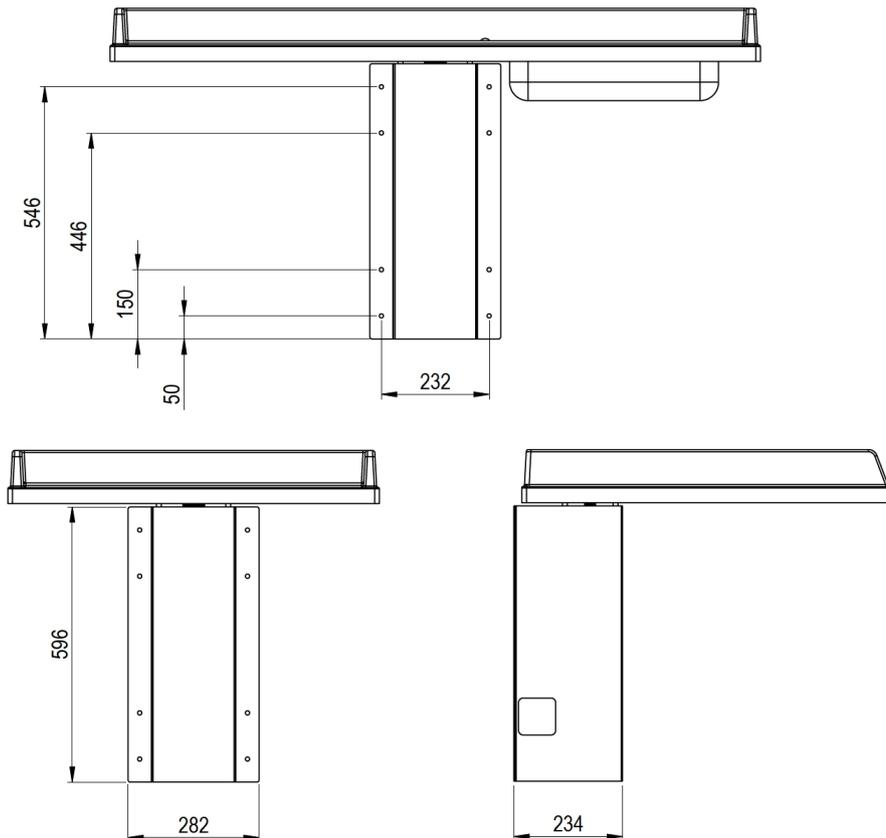

6. Functional test

- Make sure that the wall installation is intact.
- Run the changing table down and up all the way to respectively end position. Check that it moves freely, without hindrance and jarring sounds.
- Check that no cables are jammed.
- If the changing table does not reach the lowest position:
Press the down button for 5 seconds until the control box clicks. When the control box clicks the synchronisation is ok.
- Model with sink:
Run the changing table to the end position and make sure the hoses are long enough above the fixing point.