


Settings for the soft seat

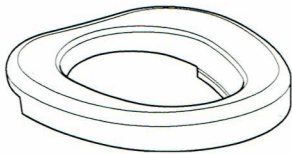

Soft seat

Step-by-step instructions



CAUTION

When the soft seat is placed on the Geberit AquaClean 8000plus, it is possible for the shower to start without anyone sitting on it. Water sprays out of the Geberit AquaClean 8000plus.

- ▶ Do not activate the <Shower> button or the optical remote control when the Geberit AquaClean 8000plus is not being used.

- 1 Place the soft seat on the toilet seat. <Odour extraction unit> starts automatically.
- 2 Sit on the toilet.



After 20 min. (or 10 min. in soft seat mode), the Geberit AquaClean 8000plus switches to standby. <Odour extraction unit> stops.

The Geberit AquaClean 8000plus can be activated again by pressing any button. <Odour extraction unit> starts automatically.

- 3 Press the <Shower> button on the control panel or remote control → The spray arm is extended and the shower starts.
- 4 The shower stops automatically after 20 s → the spray arm retracts. To stop the shower earlier than this, press the <Shower> button again.
- 5 The dryer starts automatically at the end of the shower procedure.
- 6 To stop the dryer: Press the <Shower> button. (Dryer and air purification do not stop automatically.)
- 7 Remove the soft seat.



If the soft seat remains on the toilet seat, the Geberit AquaClean 8000plus will switch to soft seat mode after 60 min. All functions are deactivated.

The Geberit AquaClean 8000plus can be activated again by pressing any button. When the soft seat is removed, the shower toilet will switch from soft seat mode back to the factory settings after 60 min.



The soft seat should be removed, cleaned and stored near the Geberit AquaClean 8000plus after each use.

Information on use without the soft seat is found in the Geberit AquaClean 8000plus operating instructions.