

EN Operating / Care instructions Centerlift 6490

1. Operating instructions

Centerlift 6490 is a motorised kitchen island lift for cabinets at one side and the other side with space for knees. Height adjustment is done by floor-mounted motors.


Centerlift 6490 is equipped with safety trip panels under the cabinets and safety strip under the frame at the side with space for knees. The function of the safety switch is to stop the movement if it comes in contact with any object.

- Press and hold the button to start the operation.
- Release the button when the worktop is at the desired level.

Pos. 1 - Control buttons

Pos. 2 - Safety trip panels under the cabinets

Pos. 3 - Safety strip

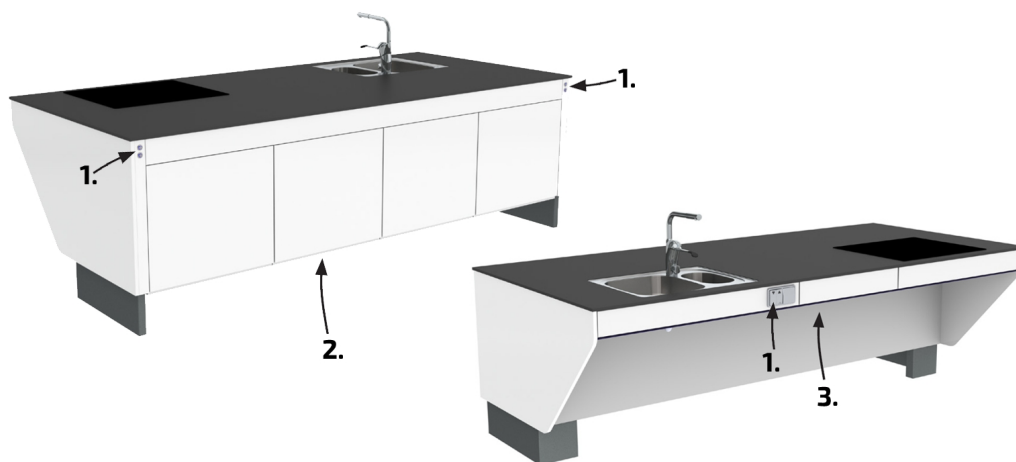

2. Maintenance

The product is maintenance-free. Greasing and other actions are made during the manufacturing for the lifetime of the product. From a safety point of view, however, some components shall be inspected each year.

- Inspections, service and repair work shall be made by competent persons.
- Remove the objects from the worktop before maintenance and repair works are made.

3. Functional test

- Run the lifting system down and up all the way to respectively end position and make the following checks:
 - Check that it moves freely, without hindrance and jarring sounds.
 - Check that it stays in the lowest resp. top positions.
- Check that no cables or hoses are jammed and that they are fixed.
- Lower the lifting system and check that the safety system works properly, by means of pressing lightly onto it. The lifting system shall stop immediately.

4. Cleaning

Clean with lukewarm water and a non-scratching detergent containing soap or similar. Use a soft cloth or similar. After cleaning the surfaces shall be dried to avoid lime deposits.

Scratching detergents or tools e.g. steel wool may not be used.
Consider that the product contains electrical components.

5. Service & maintenance records

Order	Serial	Date
--------------	---------------	-------------

Date	Date
Sign	Sign
Remarks	Remarks

Date	Date
Sign	Sign
Remarks	Remarks