

EN Operating / Care instructions Changing table 334

1. Operating instructions

Height adjustable baby changing table.

- Press and hold the button to start the operation.
- Release the button when the changing table is at the desired level.

Pos. 1


Control button

Pos. 2

Comprehensive built-in safety switch

Pos. 3

Model without sink has a foldable nursing table area.

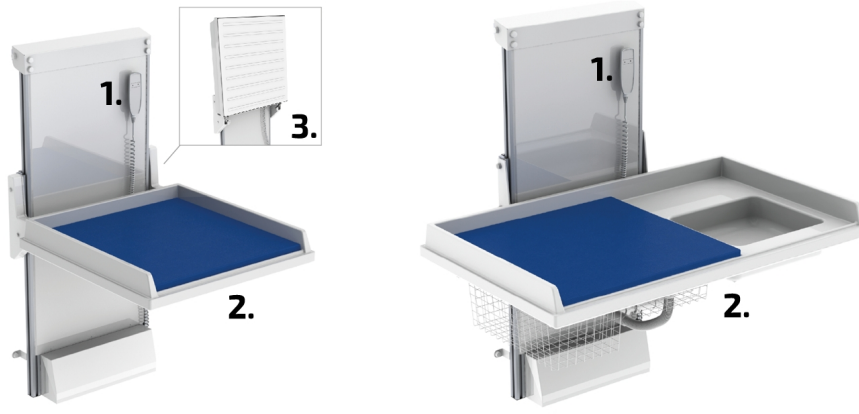

2. Maintenance

The changing table is maintenance-free. Greasing and other actions are made during the manufacturing for the lifetime of the lift. From safety point of view however some components shall be inspected each year.

- Inspections, service and repair work shall be made by competent persons.
- Remove any objects from the changing table before maintenance and repair works are made.

3. Functional test

- Make sure the that the wall installation is intact.
- Run the changing table down and up all the way to respectively end position. Check that it moves freely, without hindrance and jarring sounds.
- Check that no cables are jammed.
- Check the function of safety switch:
Run down the changing table while lifting safety plate the underside of the table. Make sure that the lowering is stopped.
- Model with sink:
Run the changing table to the end position and make sure the hoses are long enough above the fixing point.

4. Cleaning

Clean with lukewarm water and a non-scratching detergent containing soap or similar. Use a soft cloth or similar. After cleaning the surfaces shall be dried to avoid lime deposits.

Scratching detergents or tools e.g. steel wool may not be used.
Consider that the product contains electrical components.

Cleaning the plastic surface - ABS plastic:

The surface is easy to keep clean. Use cleaning spirit to ensure hygiene.

Do not use abrasive or corrosive cleaning agents, this might damage the finish.

5. Service & maintenance records

Order	Serial	Date
--------------	---------------	-------------

Date	Date
Sign	Sign
Remarks	Remarks

Date	Date
Sign	Sign
Remarks	Remarks