



the total body drying system

user guide

contents

iDry Body Dryer 3
Overview 4
Specification 5
Installation 6 & 7
Remote Installation and Maintenance 8
Operation 9
Safety and Guarantee 10
Contact Details and Guarantee Form 11

Please read this user guide carefully as it contains important information for the safe installation, use and maintenance of the body dryer.

This user guide should be kept in a safe place for your future use. If the body dryer is transferred, ensure this user guide remains with the dryer.





Advice Line **0800 933 0020**



The iDry is a breakthrough product, revolutionising the way you dry yourself. Its simplistic, hygienic and a joy to use. It is produced to the highest of British quality and passes the strictest of control procedures to ensure you have the best results.


The iDry Body Dryer fits conveniently into the corner of a wet room or shower cubicle

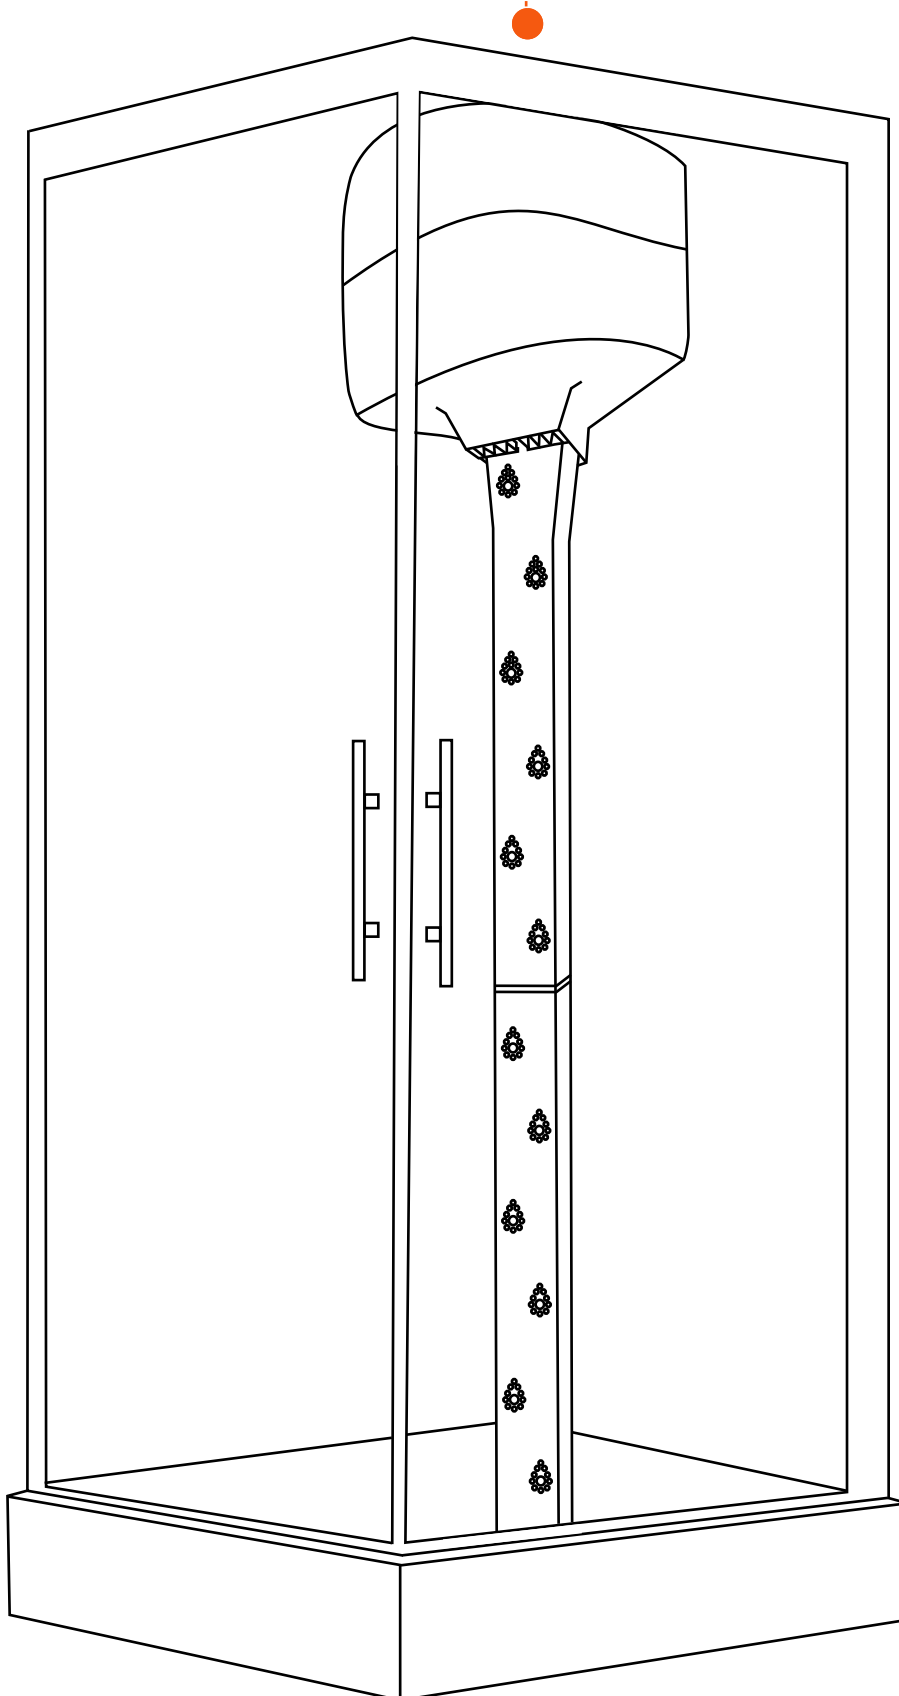

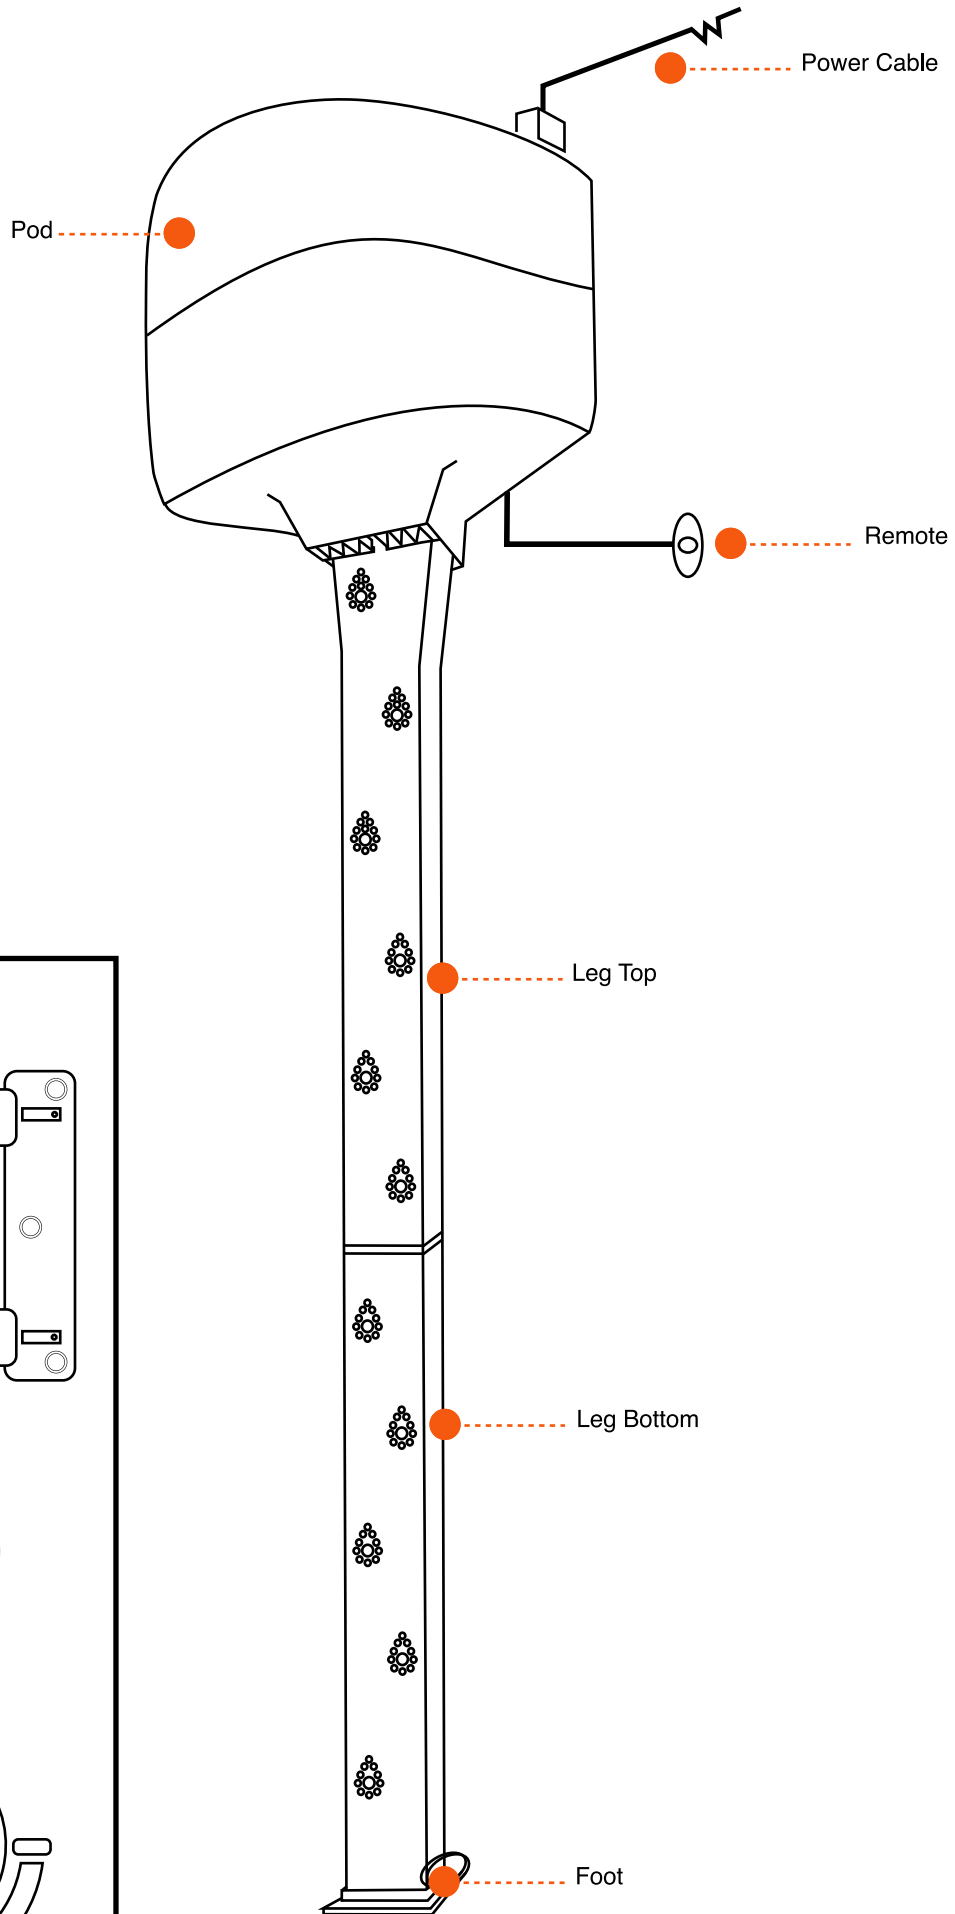


Also in this box:


Blinds, Foot And Bracket

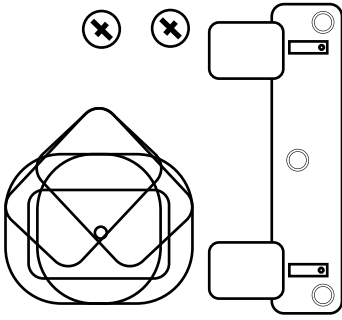



Remote

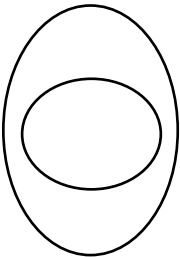

PVC Hose

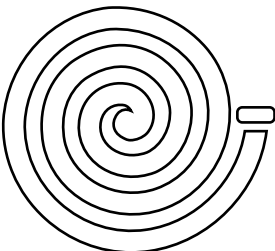

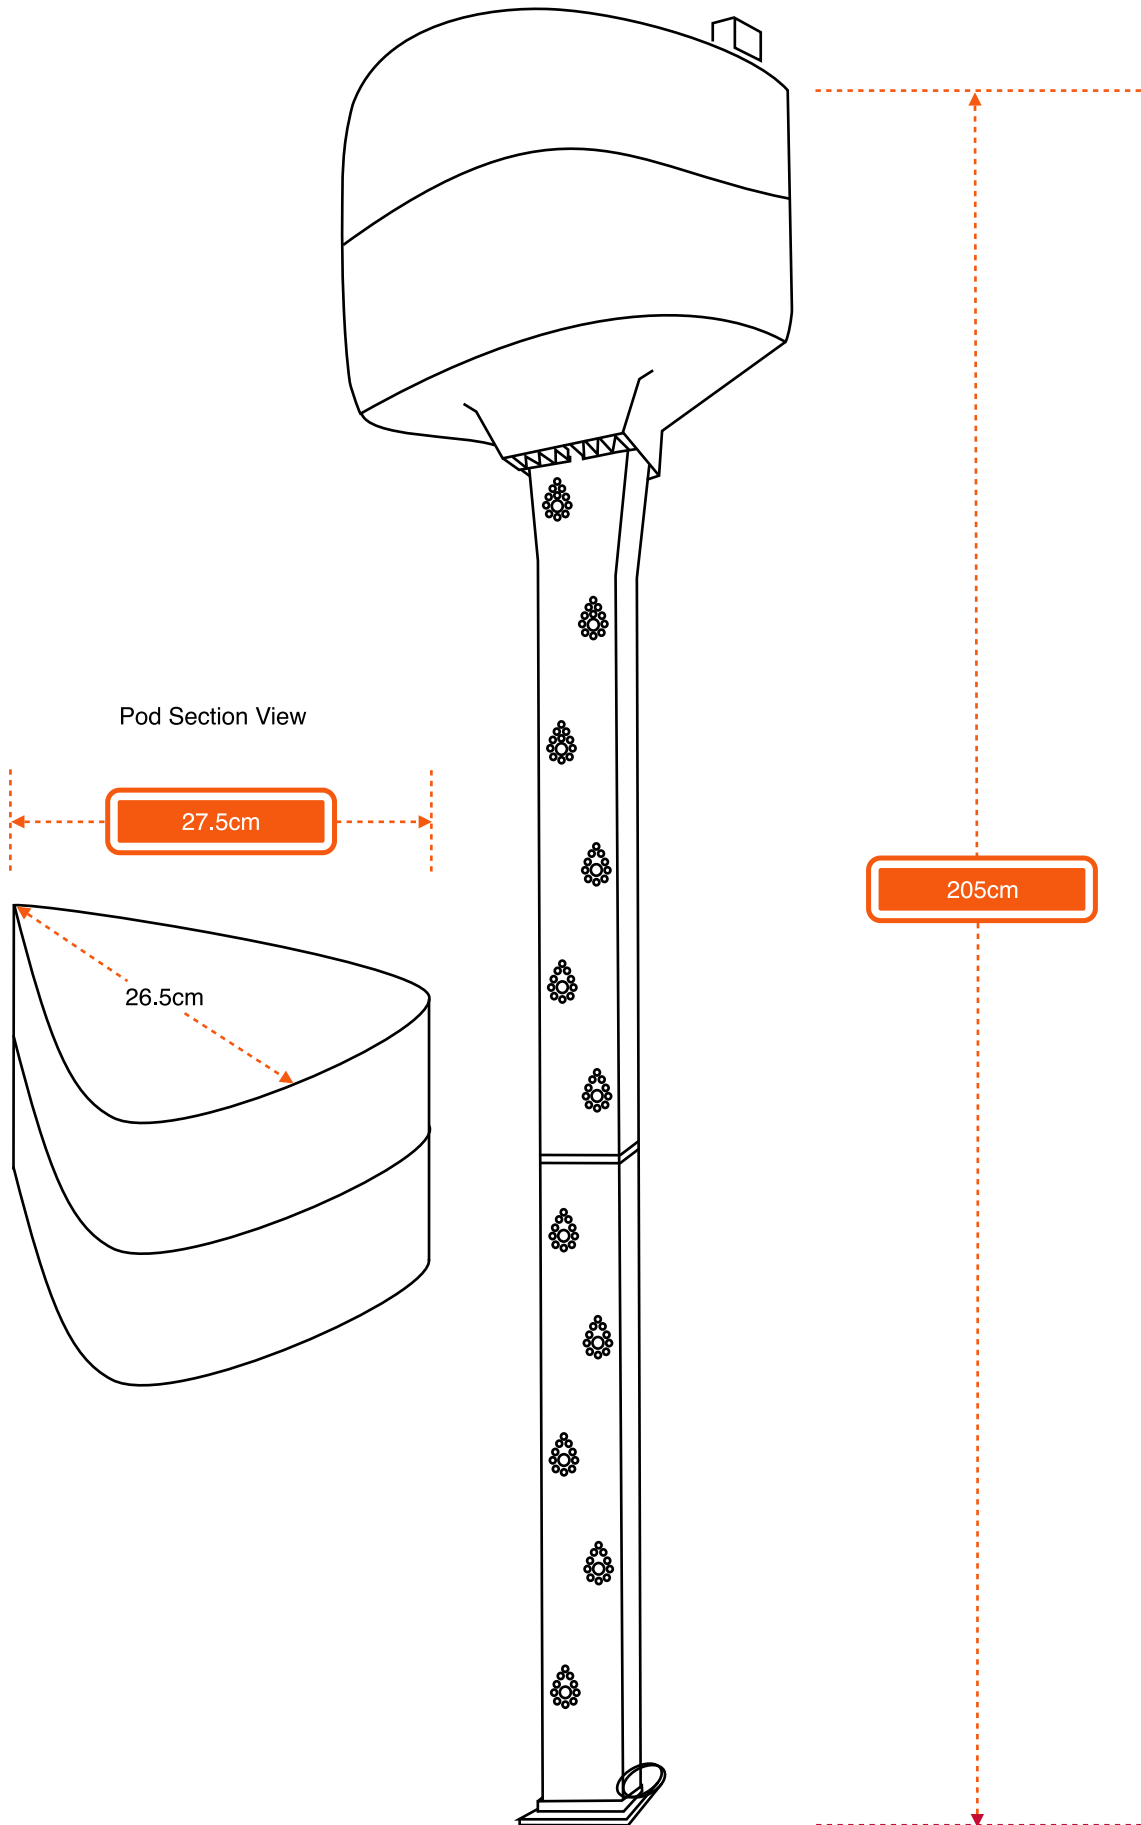

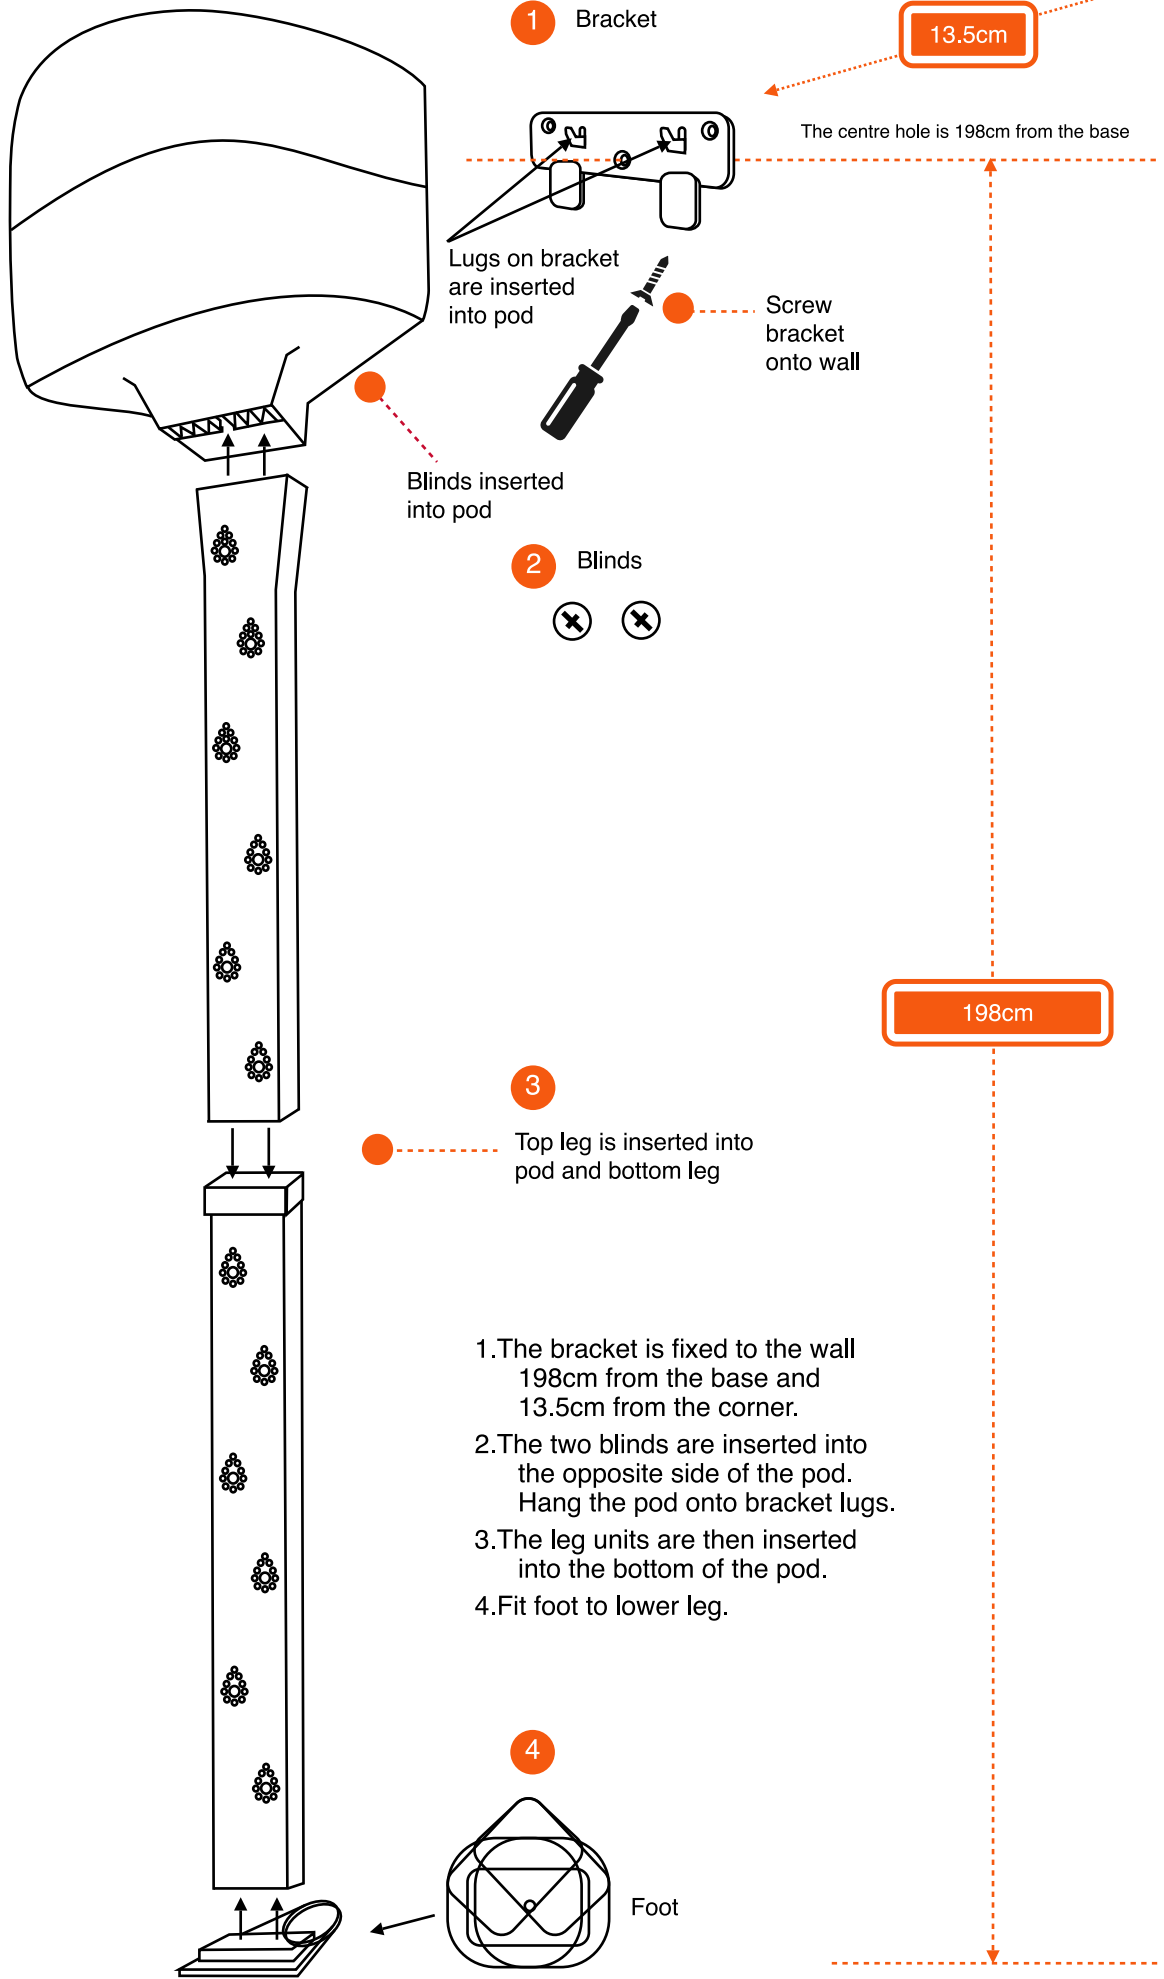

certified electrician

You must use a “part p” certified electrician to install this appliance who can self-certify their work as being compliant with the building regulations. Alternatively, you must notify the local authority who will inspect and may charge a fee.



sealing

To facilitate a strong and air tight seal, a thin bead of heat resistant silicone should be applied around the collar immediately prior to fixing the leg top in place.



fixing

Non-ferrous screws should always be used to prevent corrosion.



adjustments


The length of the dryer leg can be reduced to facilitate multiple situations. The bottom leg can be reduced by a maximum of 44cm. We recommend never cutting across the tear-drop pores.





fitting the remote

Remove top cover of remote.
Position the base unit of the remote at desired location and mark. Secure switch to wall.
Return the top cover of the remote.
The pvc connector should be inserted onto remote nozzle and pod nozzle.

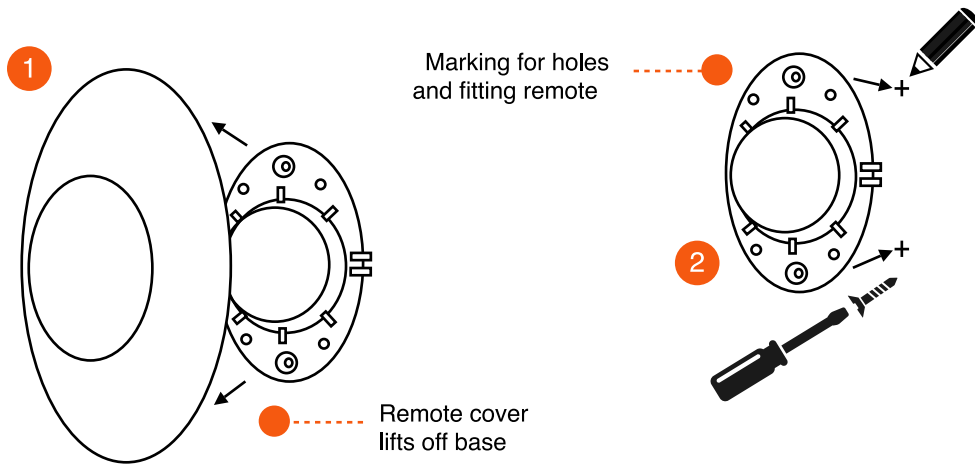

maintenance

The dryer can be wiped down with warm soapy water or any good quality detergent.

speed settings

For the best results, we recommend pressing once for a moderate speed while you shower and pressing again to increase the airflow after showering.



recycling

Recycling your old electricals is easy!




Recycle your electrical and electronic devices free at your local recycling centre. Or you can return them to body dryer resellers participating in the in store take back scheme.

Unwanted electrical equipment is the uk's fastest growing type of waste.

Many electrical items can be repaired or recycled, saving natural resources and the environment. If you do not recycle electrical equipment it will end up in landfill sites where hazardous substances will leak out and cause soil and water contamination. This can harm wildlife and also human health.

To remind you that this body dryer can be recycled, it is now marked with the crossed-out wheeled bin symbol. Please do not throw this body dryer or any other electrical equipment (including those marked with this symbol) in your bin.

x1 speed

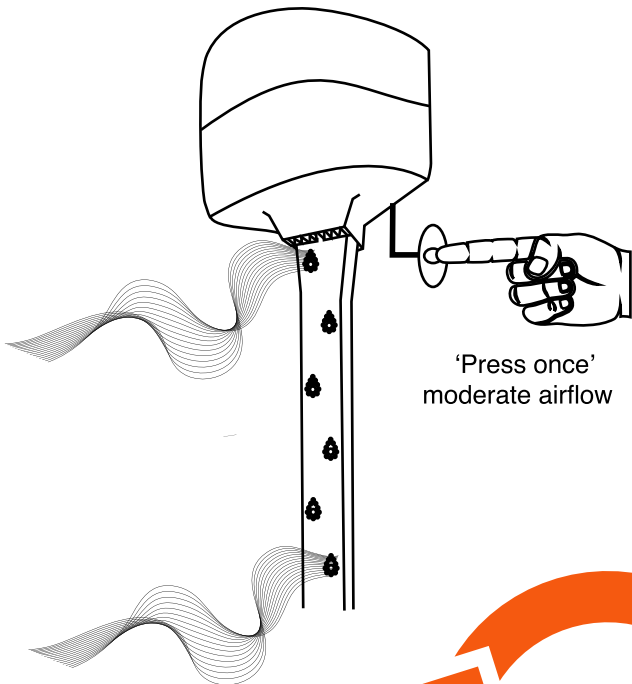


temperature


The iDry Body Dryer re-circulates warm air, so a change in space, for example, opening your shower door, will alter the ambient temperature.



x2 speed

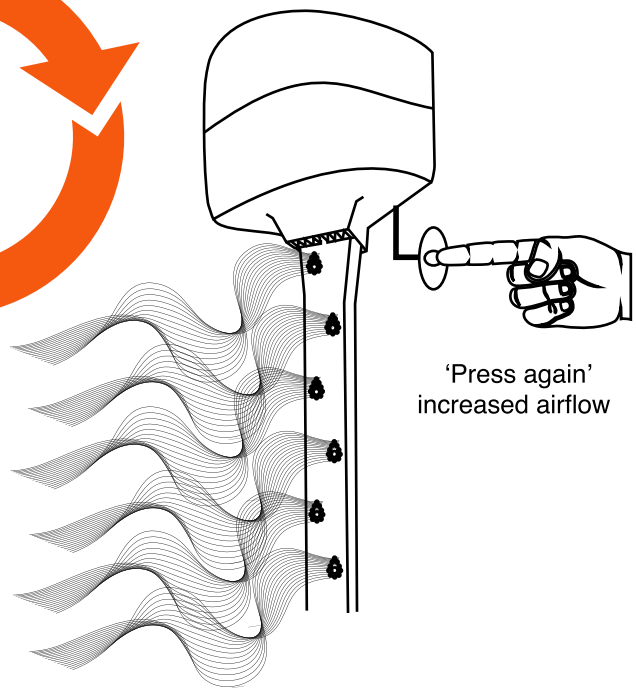

airflow off

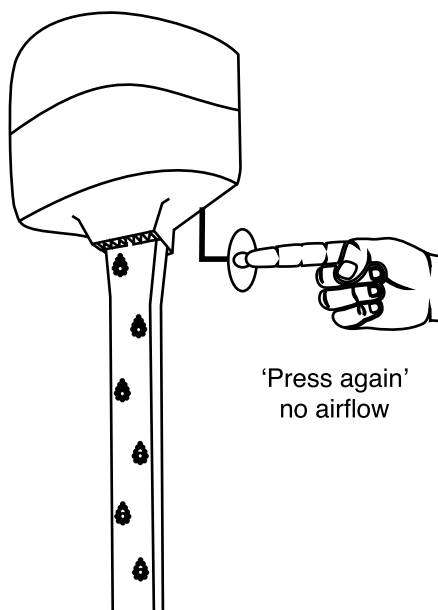

safety

Keep fingers and hands away from moving parts located in the pod.



Do not operate the dryer unless fully assembled.

Do not attempt to open the pod of the body dryer.

Only use the dryer after sufficient instruction, knowledge and supervision.

technical specifications and eu standards

Model IDRY1

Operating voltage 220/240V

Amperage 12.8 amps

Output temperature 38°C*

Unit size 205cm x 27.5cm x 26.5cm

Drying time 3 minutes

Speed function 2

Approval CE

EU directives 2006/95/EC Low Voltage Directive

2004/108/EC EMC Directive

IP rating IPX4

*dependent on room temperature. output temperature can be 3 - 4°C above ambient.

guarantee

Your new body dryer is guaranteed against the cost of breakdown repairs for two years from the date of the original purchase.



What is covered?

- Repairs necessary as a result of faulty materials, defective components or manufacturing defect.
- Cost of functional replacement parts.
- The labour costs of an iDry approved repairer to carry out any repairs.

What is not covered?

- Accidental damage, misuse and abuse.
- External or appearance parts including remote, pvc remote connector, foot or legs.
- Repairs required as a result of unauthorised repair or inexperienced installation that fails to meet the requirements within this user manual.

Important notes

- The body dryer must be correctly installed, located and operated in accordance with the instructions in this user manual.



Dealer

Independent 4 Life Limited
Unit C, Mainline Business Centre
74 Station Road
Liss
Hampshire
GU33 7AD
Tel: 0800 500 3001
E-mail: info@independent4life.co.uk
Internet: www.independent4life.co.uk



Independent4Life

