

Product data sheet



Information


Designation Arsis Fantasy foldaway shower seat, Anthracite grey and wood
Reference 047728



Product advantages

- + Can be unclipped from its wall bracket to enable the mounting of the ARSIS shower shelf.
- + Large size ergonomic seat with a refined design for a maximum of comfort.
- + Personalized finish.

Description

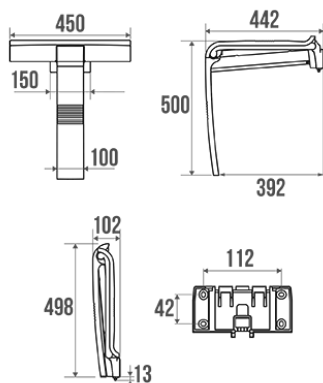

Chair leg in grey cast aluminium with wooden effect finish.
Large size ergonomic seat 450 mm made of anthracite polymer.
Anthracite epoxy-coated aluminium structure (tube Ø 25 mm).
Locking position, anti-theft lock.
Can be unclipped from its wall bracket for cleaning and occasional community use.
Can be replaced by a shower shelf ref. 047735 if the user doesn't need the seat.
Perfectly assorted with the Arsis Fantasy 300 mm straight grab bar ref. 049448.

Standard height: 500 mm.
Wall fixings included.
Concealed fixings.
Design coordinated with the Arsis Fantasy shower bar.
Perfectly suitable for use in the hotel industry.

Technical characteristics

Finish	Epoxy-coated
Color	Anthracite grey & Wood
Dimensions	442 x 450 x 500 mm
Diameter Ø	25 mm
Material	Polymer & Aluminium
Gross weight	3.300 kg
Packaging	Cardboard box
CE Marking : safe load	150 kg
Laboratory tests	225 kg
Guarantee	10 years

Net weight	3.300 kg
Gencod	3563390477281
Custom code	7615200000
Technical sheet	A13570016_IND_12
Spare parts	Ref. : 049742 : Red locking pin.
Spécificité	The Arsis shower seat is only designed for a sanitary use.

Fixing and maintenance advices

Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. The shower seat provides support and added safety if properly fitted in accordance with our technical instructions. For use in seated position. To guarantee the user safety, DO NOT rise up on the seat. When the seat is raised, DO NOT use it as a grab bar. To avoid any risks of pinching out, DO NOT put your fingers in the mobile parts. The product does not contains any dangerous substance for the health. We disclaim all liability for any personal injury resulting from inappropriate installation or use of this seat.

Maintenance

IMPORTANT: To ensure the sustainability of the product and user safety, we recommend using a solution made of mild soap for cleaning. CAUTION: DO NOT USE cleaning products made of: etones, hydrocarbons, acids, bases, esters and ethers. After use of a cleaning product, make a rinsing in the clear water.

Confort of use

Function

Rest ★★★★

Characteristics

Horizontal ★★★★

Vertical ★★★★

Corrosion resistant ★★★★

Type of Use

Shower ★★★★

Cloakroom/Changeroom ★★★★

Location of Use

Medical facilities ★★★★

ERP/IOP ★★★★

Hotels ★★★★

Private homes ★★★★

Workplaces ★★★★