

# Product data sheet






#### Information


DesignationARSIS straight grab bar, 400 mm, White Epoxy-coated AluminiumReference049840

# Product advantages

- + Elliptic tube for an improved grip.
- + Elegant and Design.
- + Corrosion resistant warranty.

#### Description

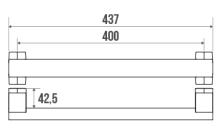



Elliptical tube in white epoxy-coated aluminium 38 x 25 mm. White resin cover plates.

Wall fixings included. Design coordinated with all ARSIS Comfort items. Perfectly suitable for use in the hospitality industry.

### **Technical characteristics**

Finish	Epoxy-coated
Color	White
Dimensions	400 mm
Diameter Ø	38 x 25 mm
Material	Aluminium
Gross weight	0.500 kg
Packaging	Plastic protection bag + Hanger for display
CE Marking : safe load	150 kg
Laboratory tests	225 kg
Guarantee	10 years

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions. Dimensions in mm.

All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Net weight Gencod Custom code Technical sheet Spare parts 0.445 kg 3563390498408 7615200000 <u>A04984002\_IND\_10</u> Réf. 049007 : Support de fixation alu chromé, Réf. 049008 : Cache-fixation blanc

### Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

#### Maintenance

IMPORTANT: To ensure the sustainability of the product and user safety, we recommend using a solution made of mild soap for cleaning. CAUTION: DO NOT USE cleaning products made of: etones, hydrocarbons, acids, bases, esters and ethers. After use of a cleaning product, make a rinsing in the clear water.

## Confort of use

Function		Characteristics		
Support	***	Horizontal	***	
Raising	<b>★</b> ★☆	Vertical	***	
Transfer	***	Diagonal	***	
		Corrosion resistant	***	
Type of Use		Location of Use		
Bath	***	Medical facilities	***	
Shower	***	ERP/IOP	***	
Toilet	***	Hotels	***	
Cloakroom/Changeroom	***	Private homes	***	
		Workplaces	***	

Fiche produit mise à jour le : 10/01/2023

© PELLET ASC - Non contractual document. Please read our General Sales Conditions. Dimensions in mm.