






Toilet seat Dania with cover
With stabilising buffers and extra strong cross-bar hinge (D92).

<p>Item number</p> <p>Colour</p> <p>Description</p>	<p>R37108-D92999 VVS: 615679108 EAN: 5708590315980 HMI: 108574 NBS: N13:300</p> <p>Toilet seat, Dania, with stabilising buffers, with cover. With extra strong cross-bar hinge.</p> <p>Dark blue (RAL 5011)</p> <p>Toilet seat, Dania, with stabilising buffers, with cover. With extra strong cross-bar hinge.</p>  	
<p>Materials</p>	<p>Seat/cover: Thermoset plastic (urea)</p> <p>Strap: Stainless steel V2A</p>	
<p>Product capacity</p>	<p>This product has been tested statically up to 375 kg. As the European standard for technical aids for disabled, BS/EN 12182:2012, requires a static test with safety factor 1.5, the nominal maximum load for this product is therefore 250 kg.</p>	
<p>Weight</p> <p>Gross weight</p> <p>Weight per crate</p> <p>Qty per crate</p> <p>Crates per pallet</p> <p>Qty per pallet</p>	<p>3,757 kg</p> <p>4,257 kg</p> <p>21,285 kg</p> <p>5</p> <p>18</p> <p>90</p>	

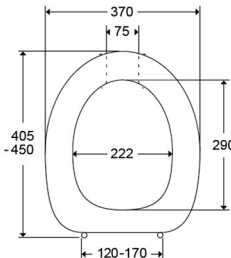

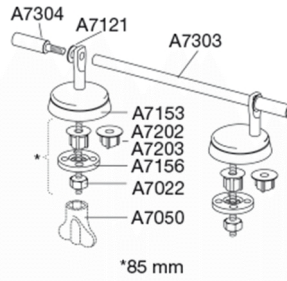

PRESSALIT®

**Toilet seat Dania with cover
With stabilising buffers and extra strong cross-bar hinge (D92).**

Cleaning

Use a mild soap solution to clean the toilet seat. Please take care that the seat and hinges are not left damp. For disinfecting the seat, e.g. ethanol 85% can be used. Make sure that the product is wiped down with a soft rag wrung out in clear water and dried off with a soft, dry cloth immediately after disinfection. *Avoid contact of the seat and hinges with abrasive, corrosive or chlorine-based cleaners, as these may cause damage or lead to flash rust. Therefore, when cleaning the bowl, make sure that the seat and cover are kept in an upright position until all cleaning agent has been flushed away.*

Warranty

Pressalit makes a commitment to remedy material and manufacturing defects for a period of five years from the invoicing date.



www.pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: +45 8788 8788
Fax: +45 8788 8789
E-mail: pressalit@pressalit.com

PRESSALIT®