inta care

Doc M Low Level WC Pack

Introduction

The Inta Doc M WC packs complies with the approved Document M of the Building Regulations and BS8300:2018. The Inta Doc M WC packs provides both left and right hand layouts without the need to specify right or left hand assemblies*

*NOTE. The drawing on page 3 illustrates a left hand layout, for right hand layouts this must be reversed.

- Complies with document M of the Building Regulations and BS8300:2018
- Close coupled and Low level packs available
- TMV3 approved packs available
- Operating pressure range of 0.1 to 5 bar
- Available with white, blue or grey rails

Product Range

	Description	Finish	Code No.
	Doc M 6Ltr low level WC pack with white rails	White	DM600WH
	Doc M 6Ltr low level WC pack with blue rails	Blue	DM600BL
	Doc M 6Ltr low level WC pack with grey rails	Grey	DM600GR
*	Doc M 6Ltr low level WC pack with white rails & TMV3 approved basin Tap	White	DMX600WH
*	Doc M 6Ltr low level WC pack with blue rails & TMV3 approved basin Tap	Blue	DMX600BL
*	Doc M 6Ltr low level WC pack with grey rails & TMV3 approved basin Tap	Blue	DMX600GR
*	Doc M 6Ltr low level WC pack with white rails & TMV3 approved mixing valve	White	DM600WH3
*	Doc M 6Ltr low level WC pack with blue rails & TMV3 approved mixing valve	Blue	DM600BL3
*	Doc M 6Ltr low level WC pack with grey rails & TMV3 approved mixing valve	Blue	DM600GR3

Note: TMV3 approval applies to packs marked * only



Doc M Low Level WC Pack

Pack Contents

inta care

■ WC SUITE

Low Level HO Pan 6ltr Close Coupled Cistern & Spatula Lever Seat Ring and Hinges

BASIN

450mm Basin - 2 Tap Holes 1 1/4" Basin Waste Lever Operated Sequential Basin Mixer Tap Bottle Trap Wall Fixing Brackets Tap hole stopper

RAILS

600mm Support Rails (x 5) Hinged Support Rail with Toilet Roll Holder (x 1)

ADDITIONAL MANDATORY ITEMS NOT INCLUDED

Alarm Pull Cord With Two Red Bangles, Shelf & Facility for Limb Storage Mirror 400mm wide x 1000mm high fixed at a height of 800mm from the from floor to the bottom edge

FIXING

It is essential that fixing instructions be followed, as the security of all items is vitally important. Walls onto which fittings are to be mounted must be suitable for the intended use of the applicable product. Appropriate fixings should be used which are suitable for the material of the fixing wall. For specialist fixings advise contact Fisher Fixings to ensure the correct fixings are used.

- WC

Plugged and screwed to the floor (fixings not supplied)

Cistern

Wall Brackets plugged and screwed to the wall (fixings not supplied)

🗾 Basin

Mounted on brackets provided using suitable fixings (fixings not provided)

Basin Mixer Tap

Lever operated Basin Mixer tap Intatherm Thermostatic Basin Mixer Tap TMV3 (DMX600WH, DMX600BL & DMX600GR only)


Thermostatic Mixing Valve

Intamix TMV3 approved 15mm Thermostatic Mixing Valve (DM600WH3, DM600BL3 & DM600GR3)



Doc M Low Level WC Pack

intacare

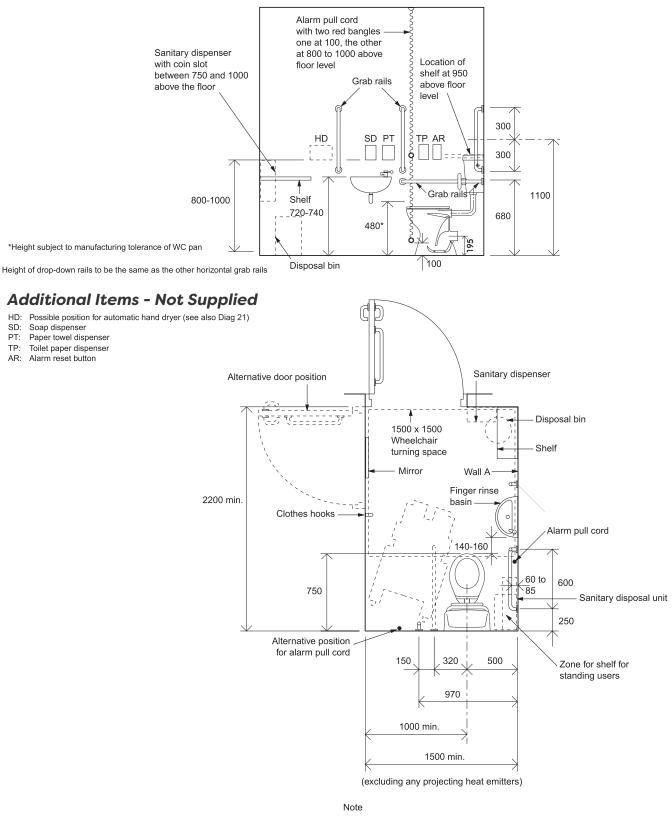

Layout for right hand transfer to WC

